

ADTECH-SCARA Manuals

——Instruction for FTP Connection

Preparations:


- ◆ One Network Cable
- ◆ Confirm the Network IP of FlexPendant
- ◆ Local Network Setting




Quick Guide:

- ◆ Default IP of RC400 controller is 192.168.0.123;
- ◆ IP of local Network must be set as 192.168.0.* to make sure that it has the same network segment with RC400 controller

Network IP of FlexPendant

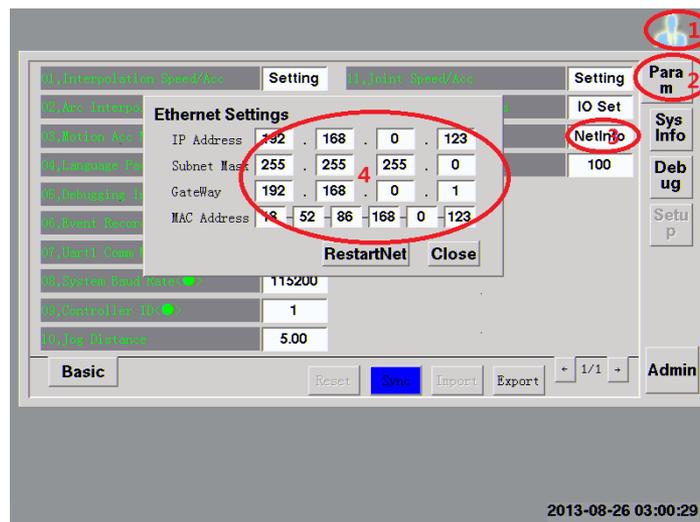


Local Network Setting

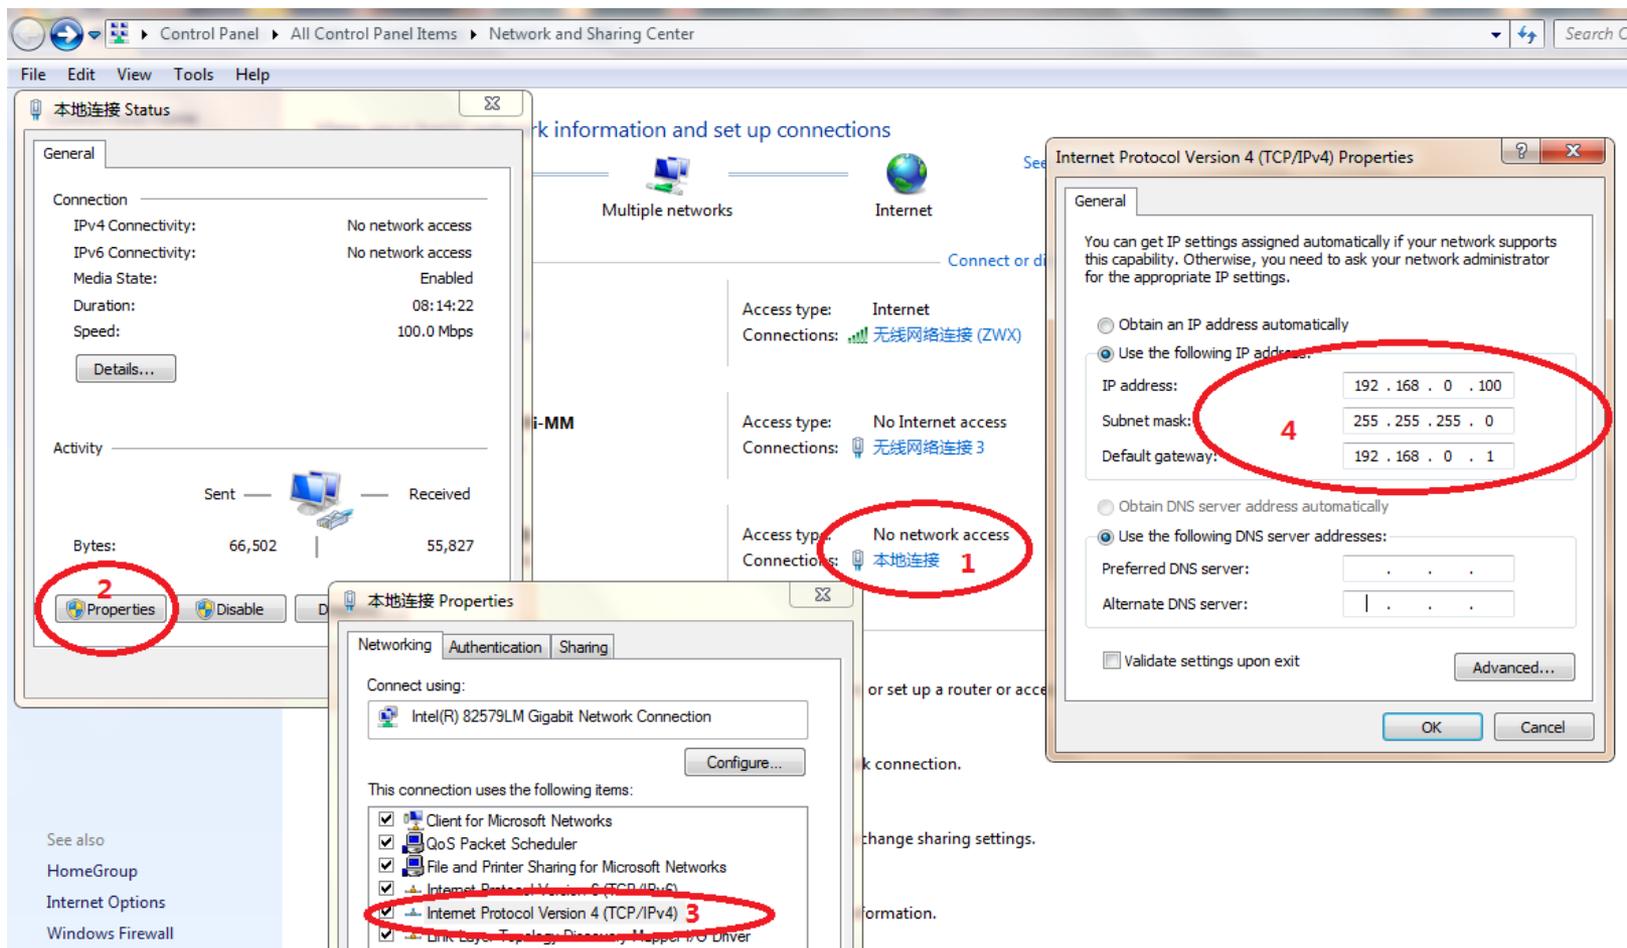

Steps

1. Open computer, and then insert web address:
<ftp://192.168.0.123>
2. Press “Enter” to ensure. If connection successfully, files of D-disk will be displayed;
3. Do copy/paste/delete operations in this interface;
4. If exit FTP connection, just close this window.

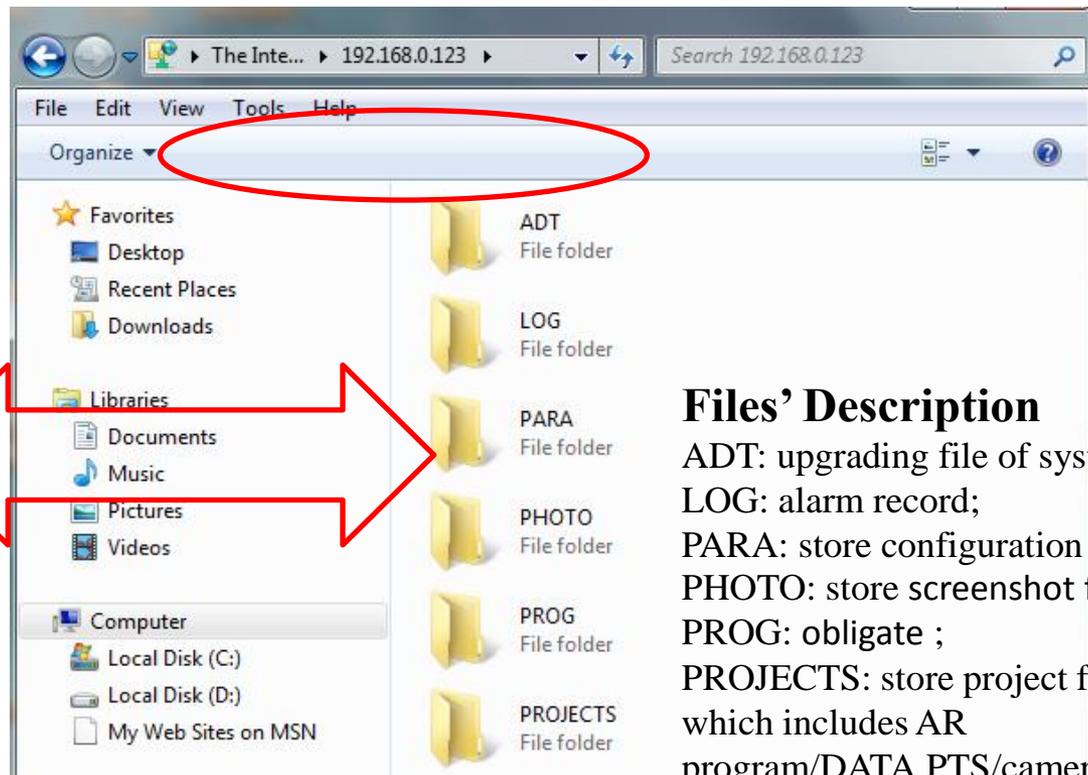

Files' Description

ADT: upgrading file of system;
 LOG: alarm record;
 PARA: store configuration file;
 PHOTO: store screenshot file;
 PROG: obligate ;
 PROJECTS: store project file,
 which includes AR
 program/DATA.PTS/camera.li
 b/encoder.lib....



How to solve if connection is failed?


◆ Solution 1 (Win7)

Step1: Enter “Control Panel” of computer;

Step2: Choose “Windows Firewall”;

Step3: Click “Change notification setting” to “Customize Setting” interface;

Step4: Turn off Windows Firewall.

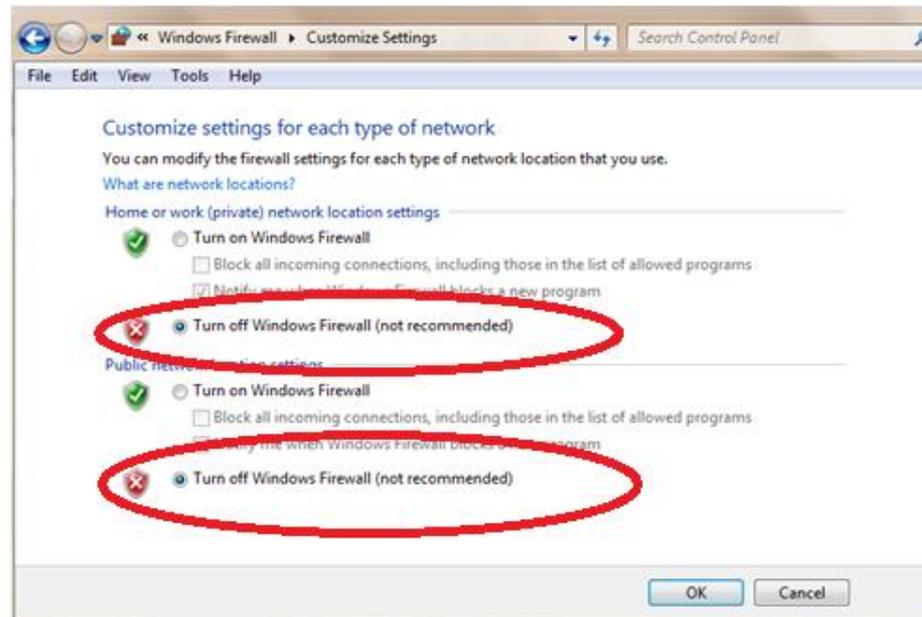

◆ Solution2(Win7)



Step1: Open Networking and Sharing Center;

Step2: Open local network(本地连接), then click “ Properties” and “Configure”;

Step3: In “Advanced” parameters, select “速度和双工” and “10Mbps 全双工” ;



SOLUTION

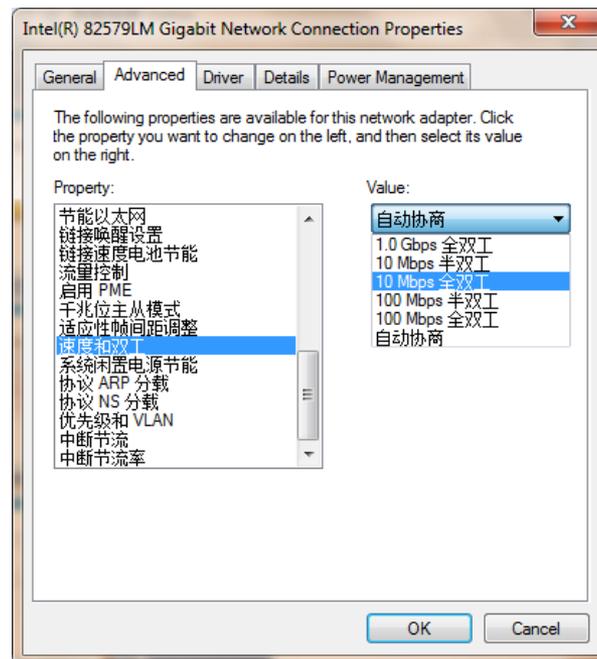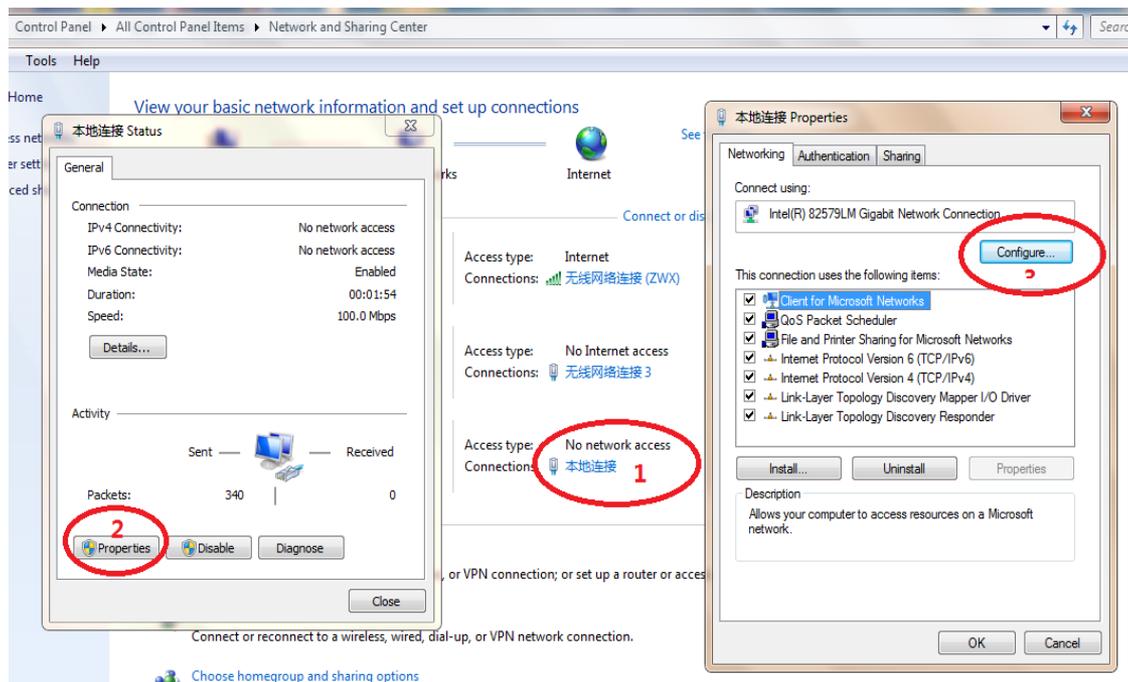

◆ Solution3(Win7)


Step1: Open “Control Panel”;

Step2: Select “Programs and Features”;

Step3: Click “ Turn Windows Features on or off ” ;

Step4: Choose “Internet Information Services” ;


Step5: Click “FTP Server”, then “FTP Extensibility” and “FTP Service”;

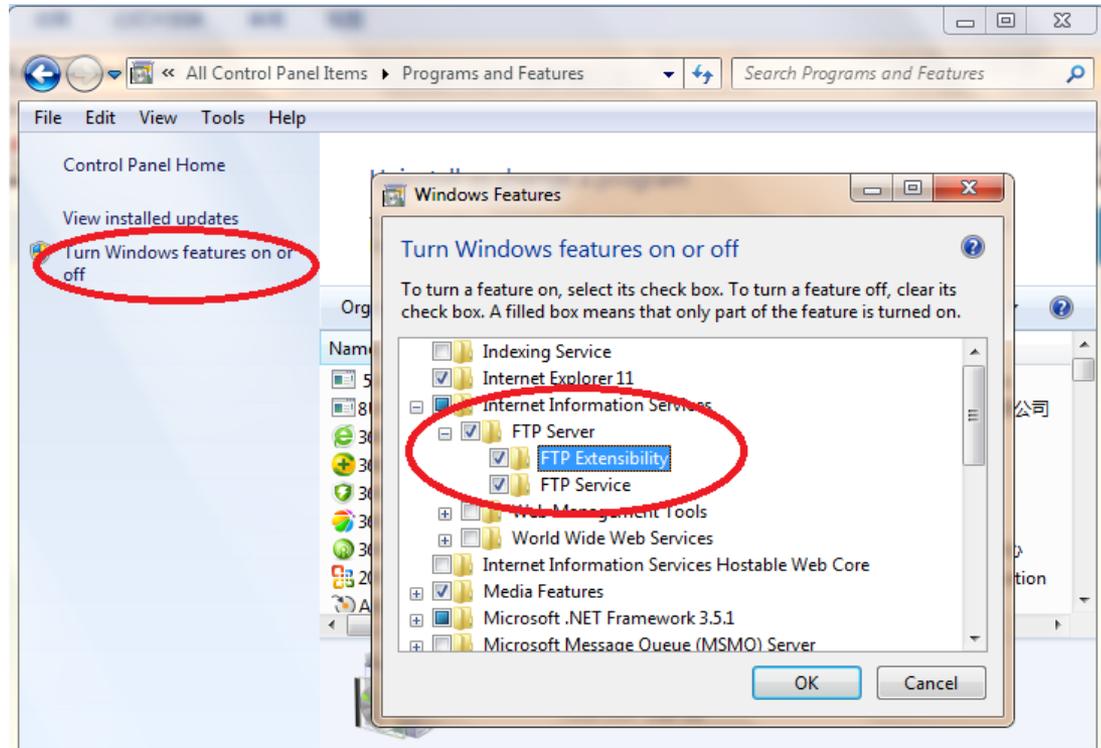

◆ Solution4(Win7)

- ◆ Disable the wireless network before FTP connection

SOLUTION

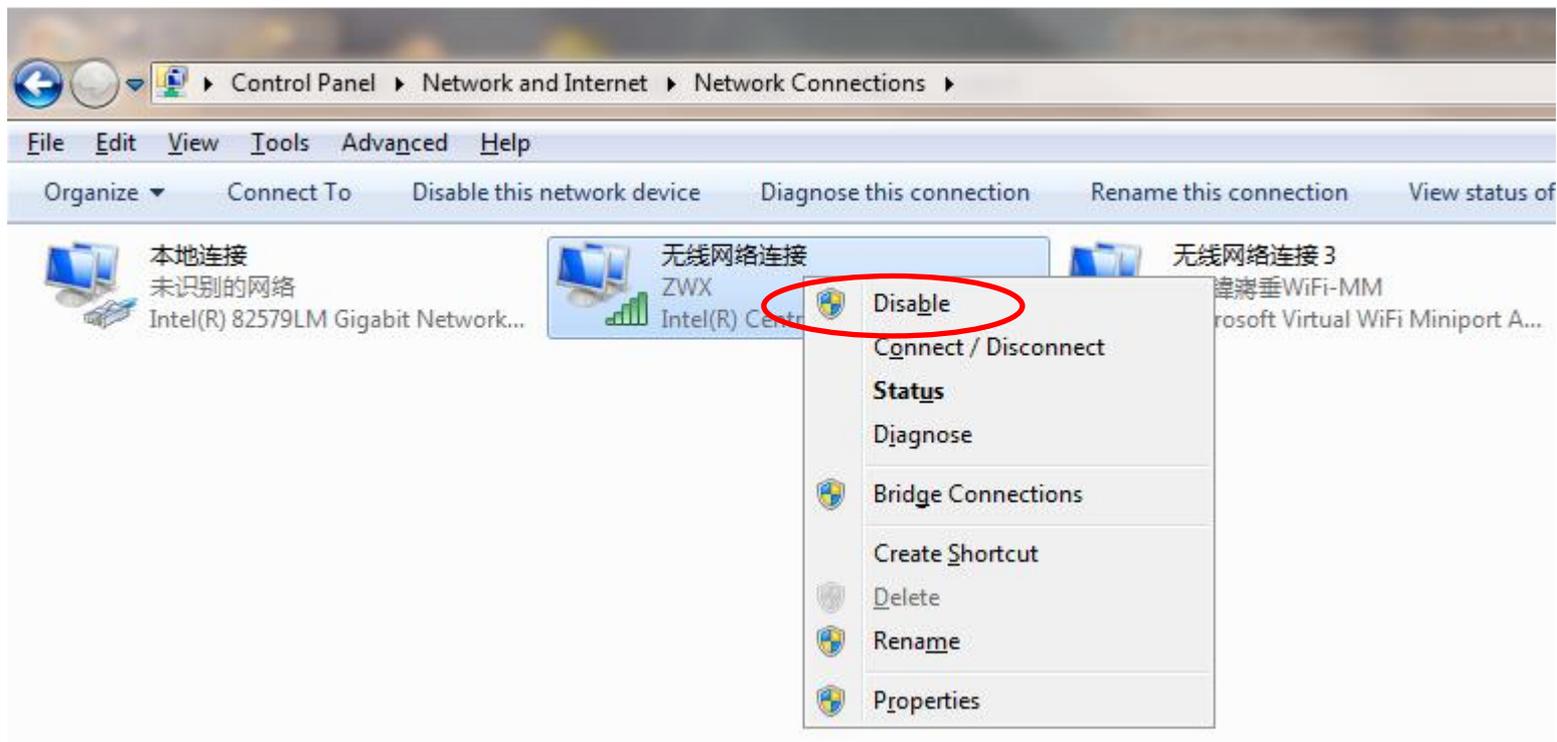

Thank You !

深圳众为兴技术股份有限公司

电话：0755-26722719

www.adtechcn.com